
## **MODEL: T8845PV**



## 24 HR. DIAL TIME SWITCH WITH 14-DAY "SKIPPER®" AND TRANSFORMER IN DUSTPROOF/BAINPROOF PLASTIC ENCLOSURE

**INPUT:** 110/125 VOLT A.C. **OUTPUT:** 24 VOLT - 20 VA

CLOCK MOTOR: 110/125 VOLTS - 60 HZ.

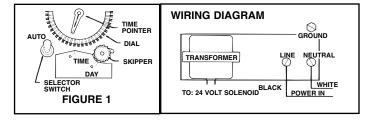

## PROGRAMMING INSTRUCTIONS:

- TO SET FIRST ZONE: For watering, push gold pin into slot on yellow dial at desired ON time. For each 12 minutes of additional watering add one pin WITHOUT skipping a slot.
- 2. **TO CHANGE ZONES:** Leave one blank slot on yellow dial after ON line (gold pin), and valve will automatically advance to next zone.
- 3. TO SET ADDITIONAL ZONES: Repeat steps 1 and 2. REMEMBER to leave blank space between zones
- 4. **TO SET TIME OF DAY:** Turn yellow dial CLOCKWISE, until correct line is at end of silver time pointer. Do NOT turn silver pointer.
- TO SKIP DAYS: Turn black skipper wheel COUNTER-CLOCKWISE until todays day is in front of "14" arrow. Press pins DOWN on days of NO watering. The skipper wheel must have all pins UP for daily watering.
- PUT SELECTOR SWITCH IN AUTO: This switch can be used to turn the system ON or OFF for manual operation without affecting the set program.

**IMPORTANT NOTICE:** Use the one silver pin that is located at Midnight on the yellow dial, it advances the skipper wheel automatically. Do **NOT** use multiple silver pins.

CAUTION: Always disconnect power at main panel before servicing this Switch or the equipment it controls.

## INTERMATIC INCORPORATED SPRING GROVE, ILLINOIS 60081-9698

158TS10974